

# Yale Lock Keypad



Checkmark

Ignore Gear

## To Unlock

Wake lock by pressing the keypad with the back or the front of the hand, multiple fingers.



**OR**



Key in your access code, then press the Checkmark ( ✓ ).



## To Lock


Press the keypad with the back or front of the hand, multiple fingers.



**OR**



# Low Battery

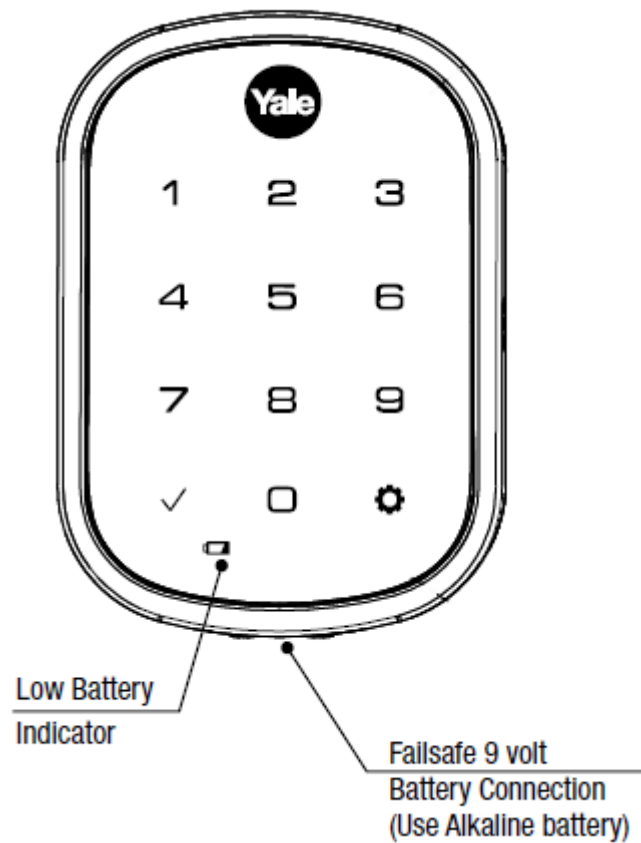

The lock is powered by 4 AA batteries that are said to last around a year. When the batteries are getting low, the lock is designed to notify us remotely, and we will do our best to change them promptly. However, it's possible that you will experience a low battery condition: an indicator will light on the keypad screen and the lock should also audibly say "the batteries are low" each time the lock is used. If you notice this, please contact us as soon as possible at 503-793-6828.

In the (hopefully unlikely) event that the battery levels fall too low, the lock will no longer light up or work. If so, a 9-volt battery held to the studs on the underside of the battery will charge the lock enough to allow it to open. We have placed an emergency battery in a waterproof container near the front door.